

## Assembly Instructions



(W x D x H) 0.68m x 0.89m x 0.73m  
Product Name: Abbey Rocking Chair

Pressure Treated products should not be treated with any other products for the first month.

**PLEASE KEEP THESE INSTRUCTIONS**

Zest4Leisure  
01352 752555 option 1 – sales@zest4leisure.co.uk


# Abbey Rocking Chair Assembly Instructions

Requires 2 person assembly. All screw holes to be pre-drilled.

Tools required: 10mm Spanner, Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, 3mm Drill Bit, Tape Measure.

<b>Abbey Rocking Chair Pack List</b>		
<b>Item</b>	<b>Description</b>	<b>Quantity</b>
A	Armrest	2
B1,B2	Leg Assembly	2
C	Seat Assembly	1
D	Back Assembly	1
E	Fascia	1
	Diagonal Bracing	4

<b>Fixings</b>		
	70mm Coach Screws & Washers	10
	90mm Coach Screws & Washers	2
	50mm Screws	10

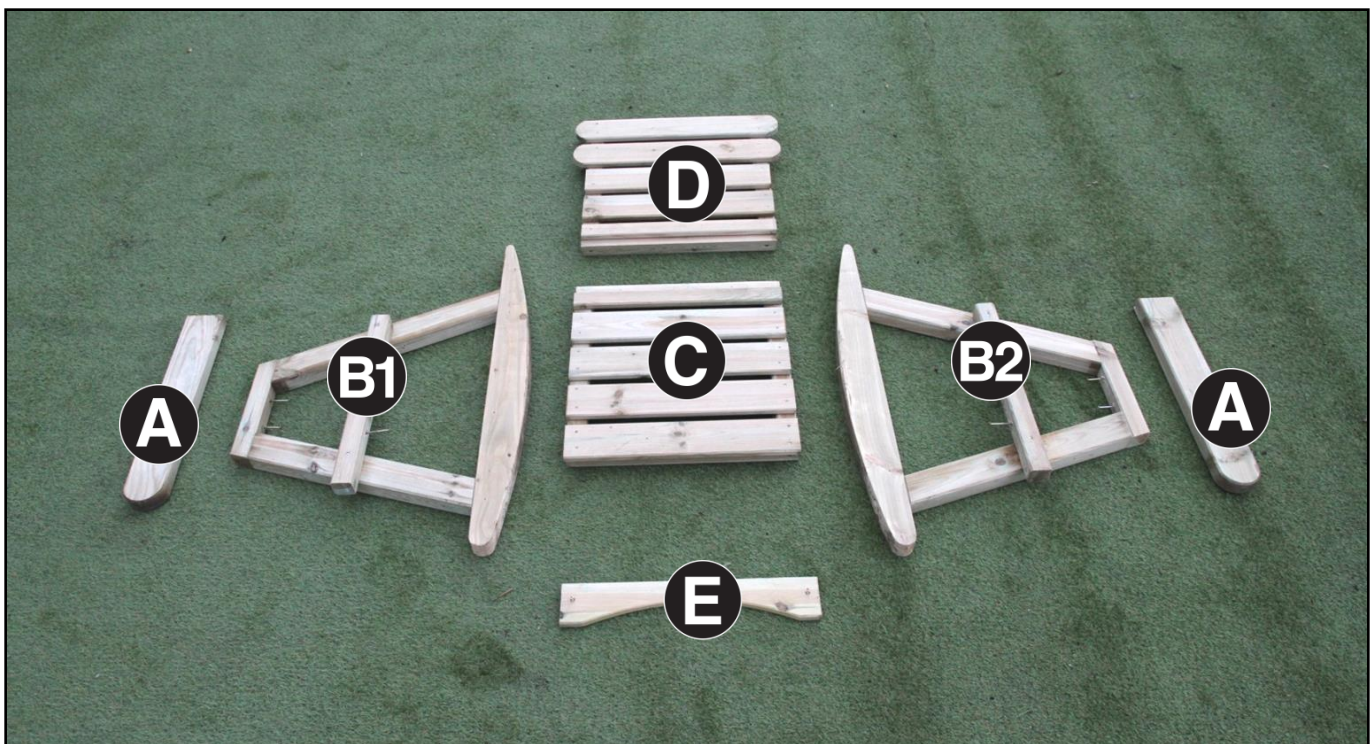

**Please take a few moments to check all pack contents listed.**

**Please contact “Zest4Leisure” directly if any of the pack contents are damaged or missing. Contact telephone: 01352 752555 option 1 or email: sales@zest4leisure.co.uk**

**Assembly requires 2 persons. All screw holes to be pre-drilled.**


**Tools required: 10mm Spanner, Corded/Cordless Drill, Pozi-drive Bit/Screwdriver, 3mm Drill Bit, Tape Measure.**

1. Position Leg Assembly B1 onto Armrest A ensuring correct orientation of components (Fig.1). Attach using 2no 70mm Coach Screws & Washers. Repeat procedure for remaining Leg Assembly B2 and Armrest A.
2. Place Seat Assembly C onto Leg Assembly B1 and attach using 2no 70mm Coach Screws & Washers (Fig.2). Repeat procedure to attach Leg Assembly B2.
3. Place partly assembled seat in upright position and attach Back Assembly D to Seat Assembly C using 2no 70mm Coach Screws & Washers (Fig.3a).  
Attach Back Assembly D to Armrests A using 2no 90mm Coach Screws – 1no per Armrest (Fig.3b)
4. Position Fascia E as shown in Fig.4 and attach using 2no 50mm Screws.
5. Invert chair assembly and place on a flat surface. Position 2no Diagonal Bracings to rear of chair and fix into position using 4no 50mm Screws (Fig.5a).  
Position and fix remaining 2no Diagonal Bracings as shown in Fig.5b & 5c using 4no 50mm Screws.


**Abbey Rocking Chair is now complete.**




1

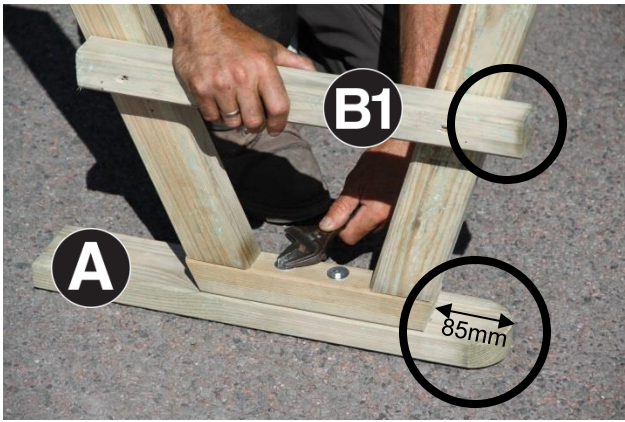

2

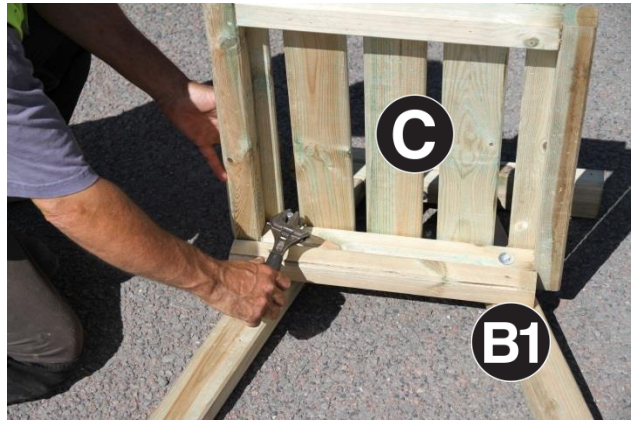


3a

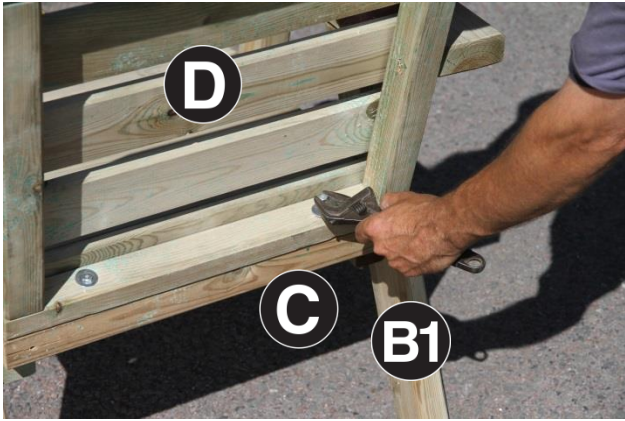

3b




4

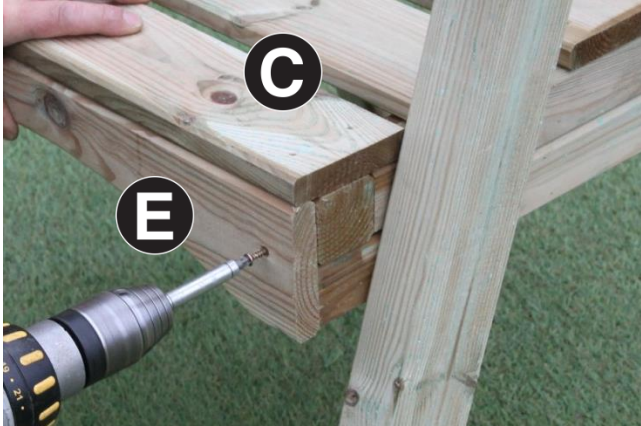

5a



5b

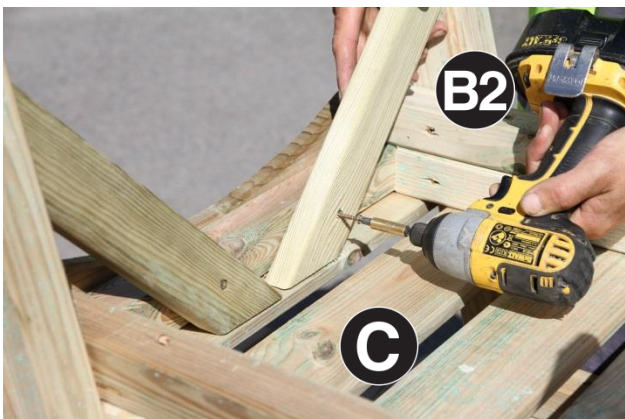

5c

