

Assembly Instructions



(W x D x H) 0.8m x 0.46m x 1.5m
Product Name: Cambridge Planter

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THESE INSTRUCTIONS

Zest4Leisure
01352 752555 option 1 – sales@zest4leisure.co.uk


Cambridge Planter Assembly Instructions

Requires 2 person assembly. All screw holes to be pre-drilled.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, 3mm Drill Bit.

Cambridge Planter Pack List		
Item	Description	Quantity
A	Front Panel	1
B	Side Panel	2
C	Back Panel	1
D	Base Panel	1

Fixings		
	60mm Screws	4
	90mm Screws	8

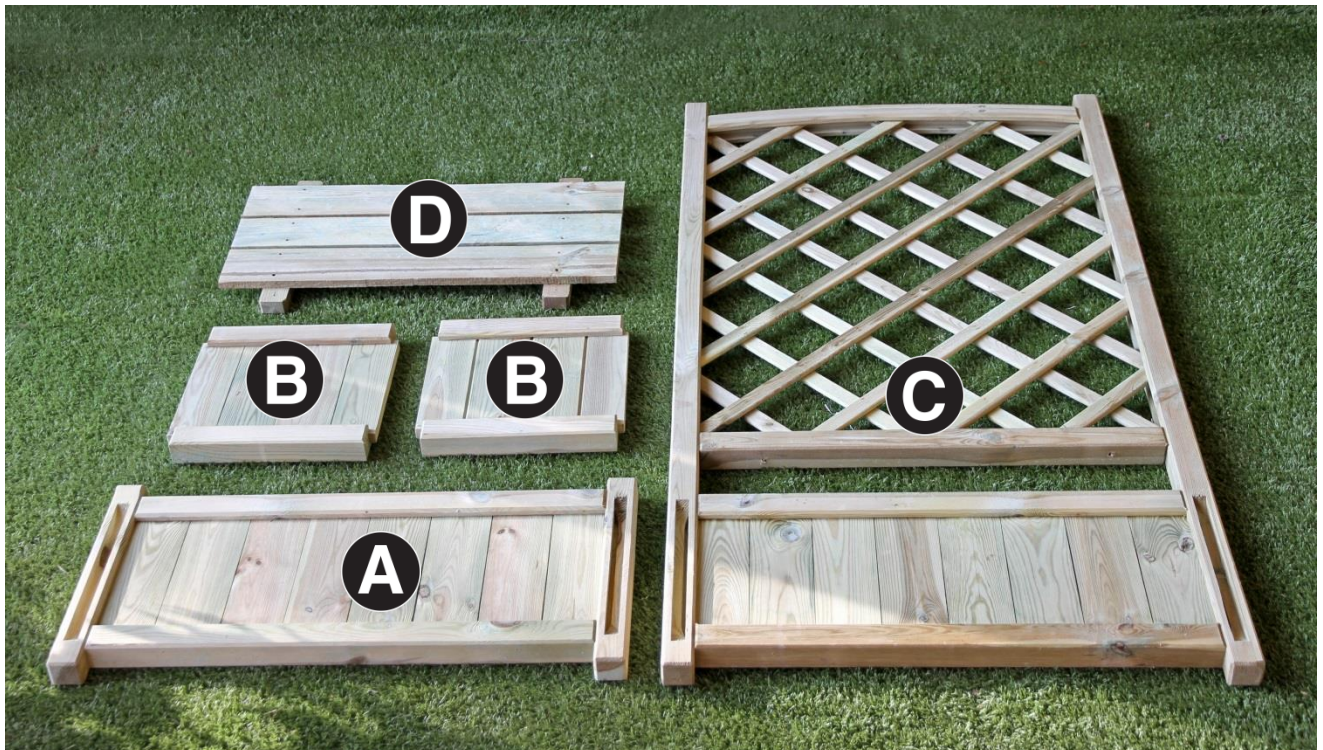

Please take a few moments to check all pack contents listed.

Please contact “Zest4Leisure” directly if any of the pack contents are damaged or missing. Contact telephone: 01352 752555 option 1 or email: sales@zest4leisure.co.uk


Assembly requires 2 persons. All screw holes to be pre-drilled.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, 3mm Drill Bit.


- 1. Locate Side Panels (B) into slots in Front Panel (A). Fix in position using 4no 90mm screws. See Figs 1a & 1b.**
- 2. Locate Back Panel (C) onto Side Panels and fix in position using 4no 90mm screws. See Figs 2a & 2b.**
- 3. Position Base Panel (D) as shown in Fig 3a and fix through battens using 4no 60mm screws. See Fig 3b.**

The Cambridge Planter is now complete.


1a

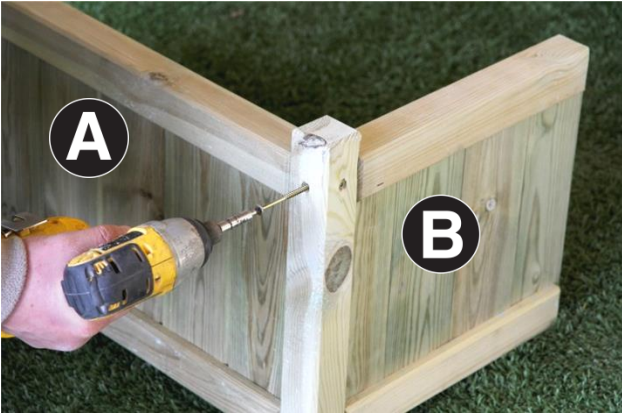


1b

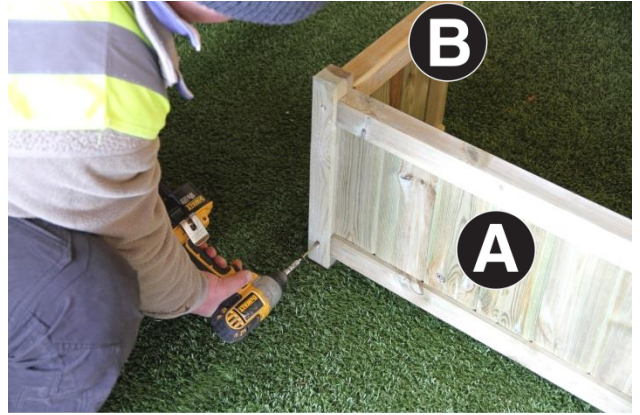


2a

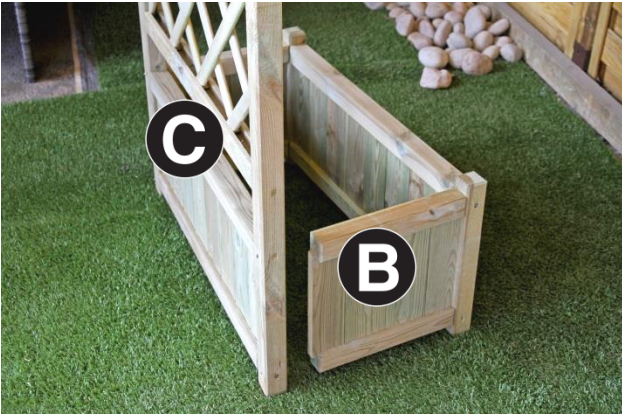

2b

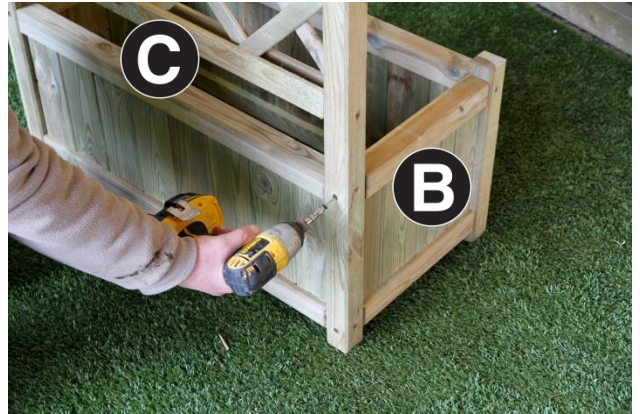

3a

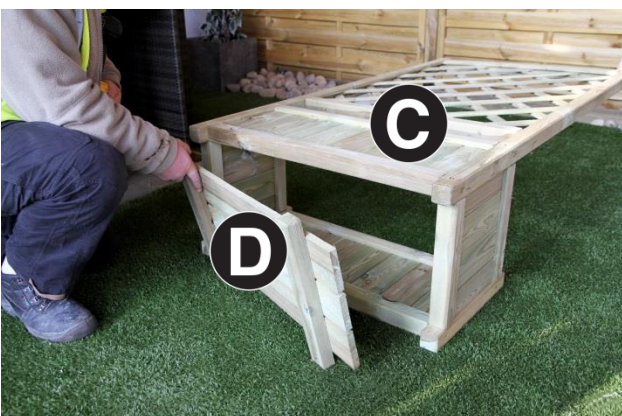

3b

